

PRODUCT INFORMATION

MAGNETOSCOP® 1.070

PORTABLE MAGNETOMETER



FEATURES

- Portable, microprocessor controlled magnetometer system
- Probes for the measurement of the magnetic flux density as absolute or gradient value
- Probes for determination of the relative magnetic permeability μr in accordance with IFC 60404-15 und ASTM A342M
- USB interface for data transfer
- SD card for storage of measurement data and parameters
- Peak value detection and storage
- Adjustable limits for treshold values
- Visual and acoustic alarm
- Single or batch measurement
- Editable measuring- and test procedures including graphical operator assistance
- Battery or mains operated
- PC software for data analysis and report generation

MEASUREMENT METHOD

- Fluxgates,
 Direction dependent, with maximal sensitivity along the sensor axis
- Hall-sensors

APPLICATIONS

- Long term monitoring of magnetic environmental conditions, e.g. prior to installation of magnetic sensitive devices e.g. MRI systems
- Testing of feebly magnetic materials and machined components for magnetic remanence
- Detection of ferrous inclusions in austenitic steels and nonferrous alloys
- Determination of relative magnetic permeability as part of the quality inspection for austenitic steels and nonmagnetic alloys
- Verify material changes caused by high temperature, corrosion, coating reduction or micro structural alteration by permeability comparative measurement

COMPONENTS

The measuring instrument as well as the probes are calibrated. They are delivered with a calibration certificate. The device and calibration parameters are electronically stored in the respective component.

The measuring instrument automatically recognizes the probes, when it is connected.

MEASURING INSTRUMENT MAGNETOSCOP 1.070







- Compact, lightweight measuring instrument
- 3,5" color screen
- Clear menu stucture for operator guidance
- Data logging function
- Connection of 1-axis-magnetic field sensor, 3-axis-magnetic field sensors as an option
- Connection of permeability probes
- Trigger input
- Temperature measuring chanel
- USB, mini USB and SD card interfaces
- Power supply by batteries, battery pack or mains adapter

PROBE PD-100-100



- Differential probe with 100 mm sensor distance
- 1 nT to 100 μT measuring range
- For detection of larger local magnetic field anomalies
- Compensation of the earth magnetic field or large disturbances caused by anomalies at bigger distance
- Orientation dependancy when moving in the earth magnetic field: < 50 nT

PROBE PD-100-20



- Differential probe with 20 mm sensor distance
- 10 nT to 100 μT measuring range
- For detection of smaller local magnetic field anomalies
- Detection of locally limited remanences
- Compensation of the earth magnetic field or large disturbances caused by anomalies at bigger distance
- Orientation dependancy when moving in the earth magnetic field: < 100 nT

PROBE PFD-100



- Probe pair for the optional arrangement as an absolute or differential probe- with variable sensor element distance
- 1 nT to 100 μT / 200μT measuring range by absolute or differential arrangement
- Determination of magnetic remanence of single components, whereby the probe has to be in a fixed position and compensated to zero
- When using differential arrangement with parallel arranged sensor elements: compensation of the earth magnetic field or bigger disturbances from the distant field
- Nonmagnetic probe mount as an option

PROBE PF-1000



- Probe for determination of absolute magnetic field
- 10 nT to 1 mT measuring range
- Sensor elements are installed parallel in axial direction of the probe housing
- Determination of magnetic fields (orientation and value)
- Determination of magnetic remanence of single components, whereby the probe has to be in a fixed position and compensated to zero.

PROBE PP-2-5



- Probe for the determination of the relative magnetic permeablity μ_r on semi-finished products and components
- Measuring range μ_r 1,0 to 2,0
- "Permeability Meter" method according to IEC 60404-15 or "Flux Distortion Method" according to ASTM A342M, method 4
- Calibrated traceable to national standards (PTB-Braunschweig), measured according to "Solenoid and magnetic moment" IEC 60404-15

PROBE PP-2-2




PROBE PP-2-2-R



• PP-2-2 with 90° angled sensor head.

MAGDATA® TRANSFER-SOFTWARE


Software for the communication between PC and MAGNETOSCOP.

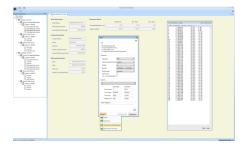

- Loading of measuring data from the MAGNETOSCOP
- Converting of measurement data set in different formats (.txt, .csv, .xml, LabVIEW®....)
- Loading of software-updates on the MAGNETOSCOP


MAGDATA® VIEW-SOFTWARE

Comprehensive software for visualization of measuring data – maximum of 16 chanels on one chart.

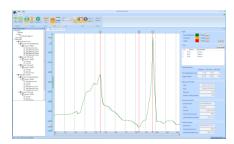

- Selecting, filtering and reducing of measuring data
- Visualisation of measuring data (oscilloscope, list of values...)
- Statistical evaluation of measurement series
- Report generation and printing
- Creation of templates for measuring and testing procedures and transfer to the MAGNETOSCOP

MAGDATA® HOTSPOT-SOFTWARE

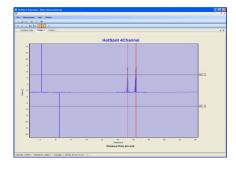

Functionality of MAGDATA VIEW

In addition:


- Processing of dynamic measurement methods with positioning information
- Processing of reference measurements for Offset-compensation
- Definition and display of treshold values as well as marking of magnetic anomalies
- Report generation according to API Spec 7

TECHNICAL SPECIFICATION


Measuring range	0,1 nT to 1 mT / μ_r 1,0 to 2,0
Resolution	24 Bit ADC
Measurement uncertainty, field measurement	1,5% of the measuring range
Measurement uncertainty, permeability measurement	5% of the measured value
Ambient temperature	0 to +40 °C
Protection grade	IP 54
Dimensions measuring instrument	212 x 102 x 41 mm (L x W x H)
Display	3,5"
Weight - measuring instrument incl. batteries	0,62 kg
Battery type	4 pcs. Mignon, AA, LR6
	Alkaline or NiMH

PROBES DIMENSIONS AND POSITION OF THE SENSORS


PD-100-100




PD-100-20

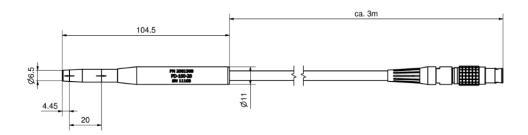

PFD-100

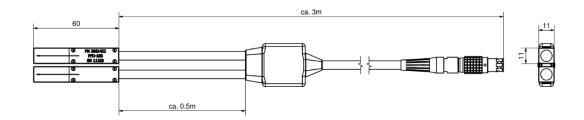


PF-1000







PP-2-5

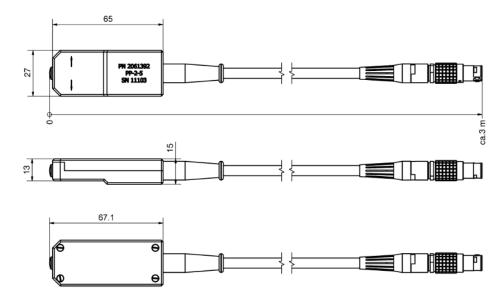

PP-2-2

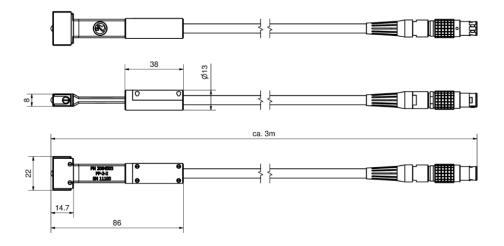

PP-2-2-R

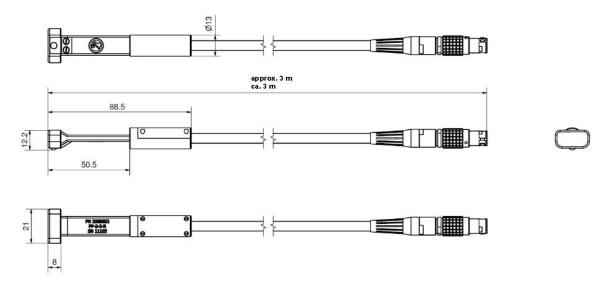

STANDARD KITS

MAGNETOSCOP 1.070 - FIELD- AND DIFFERENTIAL MEASUREMENT

Basic equipment

- Measuring instrument MAGNETOSCOP 1.070
- Transport case
- Mains adapter
- MAGDATA TRANSFER software
- USB cable
- 4 batteries

Probe PFD 100 Probe mount

MAGNETOSCOP 1.070 - FIELD MEASUREMENT

Basic equipment Probe PF-1000

MAGNETOSCOP 1.070 - DIFFERENTIAL MEASUREMENT - 20 MM

Basic equipment Probe PD-100-20

MAGNETOSCOP 1.070 - DIFFERENTIAL MEASUREMENT - 100 MM

Basic equipment Probe PD-100-100

MAGNETOSCOP 1.070 - PERMEABILITY MEASUREMENT

Basic equipment Probe PP-2-5

Reference standard μ_r 1.05

Adapter

MAGNETOSCOP 1.070 - PERMEABILITY MEASUREMENT MIN-R

Basic equipment Probe PP-2-2-R

Reference standard μ_r 1.05

Adapter

MAGNETOSCOP 1.070 - PERMEABILITY MEASUREMENT MIN

Basic equipment

Probe PP-2-2

Reference standard µr 1.05

Adapter

ACCESSORIES

POWER SUPPLY

Mains adapter	5 VDC, 2.4 A, 100 – 240 VAC
Battery pack	NiMH 1.2 V, Mignon, AA, HR6, 2.850 mAh
Battery charger for battery pack 1,2V	100 – 240 VAC
Battery pack (extern)	5 VDC, 2.4 A, 10.000 mAh
Battery charger for battery pack	5 VDC, 2.2 A, 100 – 240 VAC

CABLES

Trigger cable	5 m long
Extension cables - probes	5 / 15 m

REFERENCE STANDARDS

Reference standard	μ _г 1.005/ 1.025/ 1.05/ 1.2
Adapter for precise probe centering	Each for PP-2-5 / PP-2-2 / PP-2-2-R
on the reference standard	

SOFTWARE

MAGDATA® Transfer	System requirements:
MAGDATA® View	32 / 64 bit OS
MAGDATA® Hotspot	Windows 7 or higher

MISCELLANEOUS

, 3	For measuring instrument and external battery pack
Belt bag	For external battery pack

IMPRINT



Reg.-No. 001159 QM08

Institut Dr. Foerster GmbH & Co. KG

Division Detection-Systems & Magnetics In Laisen 70 72766 Reutlingen Germany

t +49 7121 140-312 f +49 7121 140-280 dm@foerstergroup.de

MAGNETOSCOP® 1.070 Order number: 208 130 0 Edition: 03/2016

Subject to change.

® Registered Trademark

© Copyright FOERSTER 2016

fluxgate-magnetometer.com